

ASSEMBLY INSTRUCTIONS

1. ASSEMBLE SEAT PAD (A), SEAT RING (B), PLYWOOD RING ANCHOR (C), AND SPACER BLOCK (D), UPSIDE DOWN ON CLEAN CARPETED FLOOR IN ORDER SHOWN

2. INSERT 3" BOLT THROUGH TOP HALF OF SWIVEL MECHANISM (E)

3. PUSH DOWN FIRMLY PLACE FLAT WASHER AGAINST SWIVEL AND INSTALL LOCK NUT (F)


4. START ALL 4 WASHER LOCK NUT ASSEMBLIES (F) BEFORE TIGHTENING

5. TIGHTEN ALL LOCK NUTS EVENLY TO A SNUG FIT

NOTES:

A. PART (G) CHROME FRAME ASSEMBLY

B. REQUIRED TOOLS;
PHILLIPS HEAD SCREWDRIVER
AND ANJUSTABLE END
WRENCH OR
BOX END WRENCH

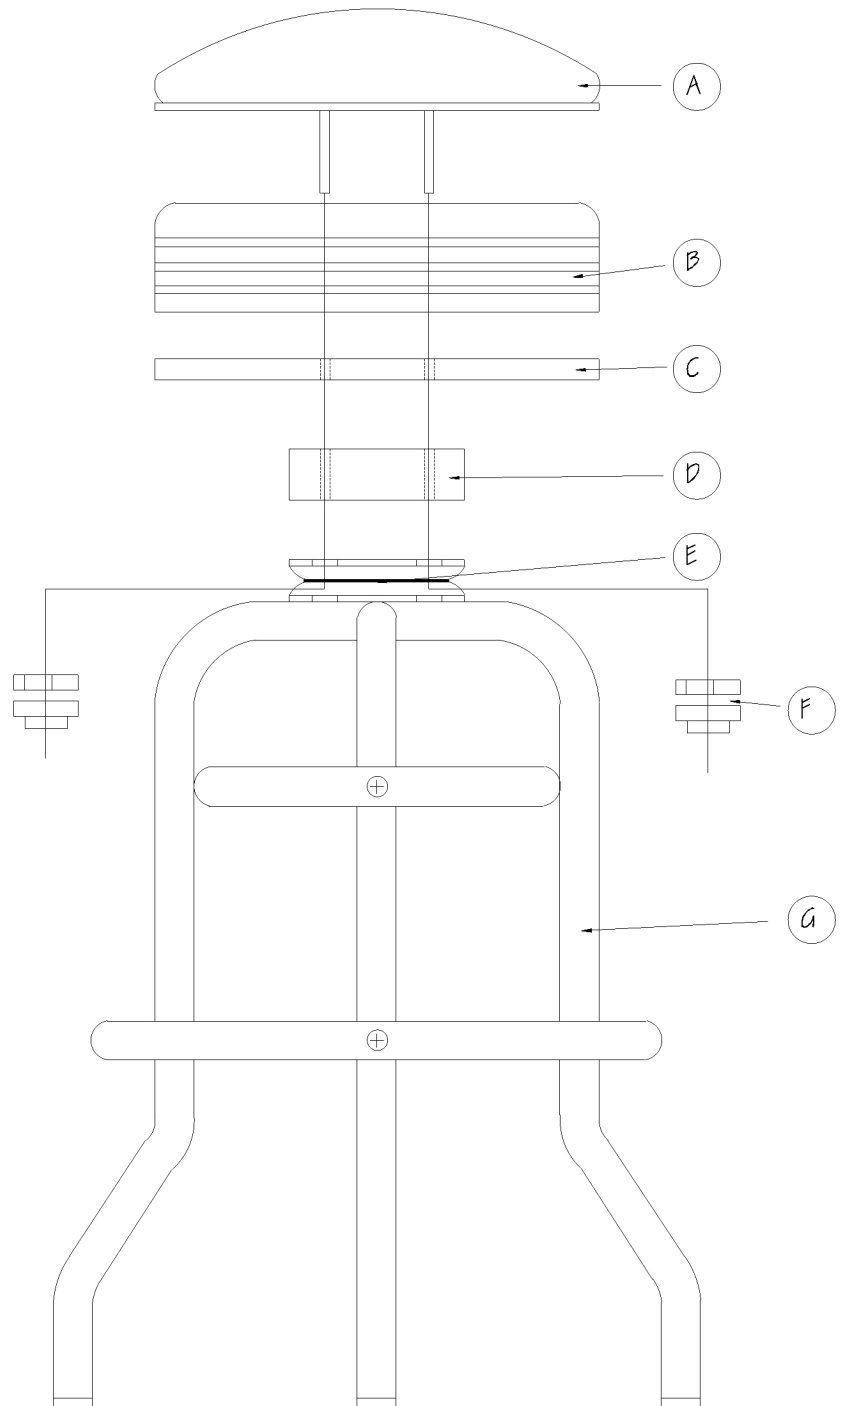

215-782 STOOL ASSEMBLY		CUSTOMER SERVICE DRAWINGS	
STOOL ASSEMBLY		DATE DRAWN: 1-3-07	DRAWING BY: KATE WILKERSON